



HARLEY-DAVIDSON

## PARTS &amp; ACCESSORIES BULLETIN

FEBRUARY 17, 1984

P&amp;A #214

NOTE: THE FOLLOWING BULLETIN COVERS THE LATE 1984 UNIQUE PARTS ON THE 1340cc MODELS. THE NEW "WET CLUTCH" PART NUMBERS AND UNIQUE FXRDG PART NUMBERS ARE INCLUDED. THE 1984 FLHX UNIQUE PARTS LISTING IS COVERED IN PARTS & ACCESSORIES BULLETIN NUMBER 215; HOWEVER USE P&A #215 IN CONJUNCTION WITH THIS BULLETIN TO GET A COMPLETE PART LISTING FOR THE 1984 FLHX MODEL. FOR ALL OTHER PART NUMBERS REFER TO THE FOLLOWING PARTS CATALOGS:

|                                            |                                      |           |
|--------------------------------------------|--------------------------------------|-----------|
| FL Models: FLH-80, FLHX.....               | 1941-84 FL Models Parts Catalog..... | 99456-84  |
| FX Models: FXWG, FXE-80, FXSB.....         | 1971-84 FX Models Parts Catalog..... | 99455-83A |
| FLT Models: FLT Classic, FLHT Classic..... | 1984 FLT Models Parts Catalog.....   | 99438-84  |
| FXR Models: FXRS, FXRT.....                | 1984 FXR Models Parts Catalog.....   | 99439-84  |
| FXST Model.....                            | 1984 FXST Model Parts Catalog.....   | 99455-84  |

## LATE 1984 1340cc PARTS

P&amp;A 1

| RETAIL<br>PRICE | INDEX<br>NO. | PART<br>NO. | N A M E | USED ON |
|-----------------|--------------|-------------|---------|---------|
|-----------------|--------------|-------------|---------|---------|

ROCKER ARMS, COVER & PUSHROD — V<sup>2</sup><sub>TM</sub>

|          |                                          |                      |
|----------|------------------------------------------|----------------------|
| 17528—84 | ROCKER COVER, outer (chrome) (2) .....   | Late 84 to * — FXRDG |
| 17529—84 | SPACER, rocker covers (chrome) (2) ..... | Late 84 to * — FXRDG |
| 17530—84 | ROCKER COVER, inner (chrome) (2) .....   | Late 84 to * — FXRDG |

## CRANKCASE

|        |                |                                              |
|--------|----------------|----------------------------------------------|
| 12026B | OIL SEAL ..... | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
|--------|----------------|----------------------------------------------|

## CRANKCASE — GEAR SIDE

|          |                                |                                              |
|----------|--------------------------------|----------------------------------------------|
| 45830-48 | PLUG, crankcase oil line ..... | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 25268—84 | GEAR COVER (chrome) .....      | Late 84 to * — FXRDG                         |

## OIL PUMP


|          |                                |                                       |
|----------|--------------------------------|---------------------------------------|
| 26058—84 | COVER ASSEMBLY, oil pump ..... | Late 84 to * — FXRS, FXRT             |
| 26226—84 | BODY, oil pump .....           | Late 84 to * — FLHX                   |
| 26242—84 | COVER, oil pump .....          | Late 84 to * — FLHX, FXWG, FXSB, FXST |
| 26277—84 | COVER ASSEMBLY, oil pump ..... | Late 84 to * — FLHX, FXWG, FXSB, FXST |
| 26278—84 | COVER ASSEMBLY, oil pump ..... | Late 84 to * — FLH-80, FXE-80         |

## CARBURETOR

|           |                                   |                           |
|-----------|-----------------------------------|---------------------------|
| 27034—84B | CARBURETOR (B88M) .....           | Late 84 to * — FLT Models |
| 27079—84  | CAP, evaporative port .....       | Late 84 to * — FLT Models |
| 27302—84  | LOW SPEED JET, 0.50mm .....       | Late 84 to * — FLT Models |
| 27303—84  | MAIN JET, 1.75mm — standard ..... | Late 84 to * — FLT Models |

## AIR CLEANER AND CHOKE

|          |                                          |                                 |
|----------|------------------------------------------|---------------------------------|
| 29145—84 | OIL LINE, air cleaner to crankcase ..... | Late 84 to * — FXR Models; FXST |
|----------|------------------------------------------|---------------------------------|

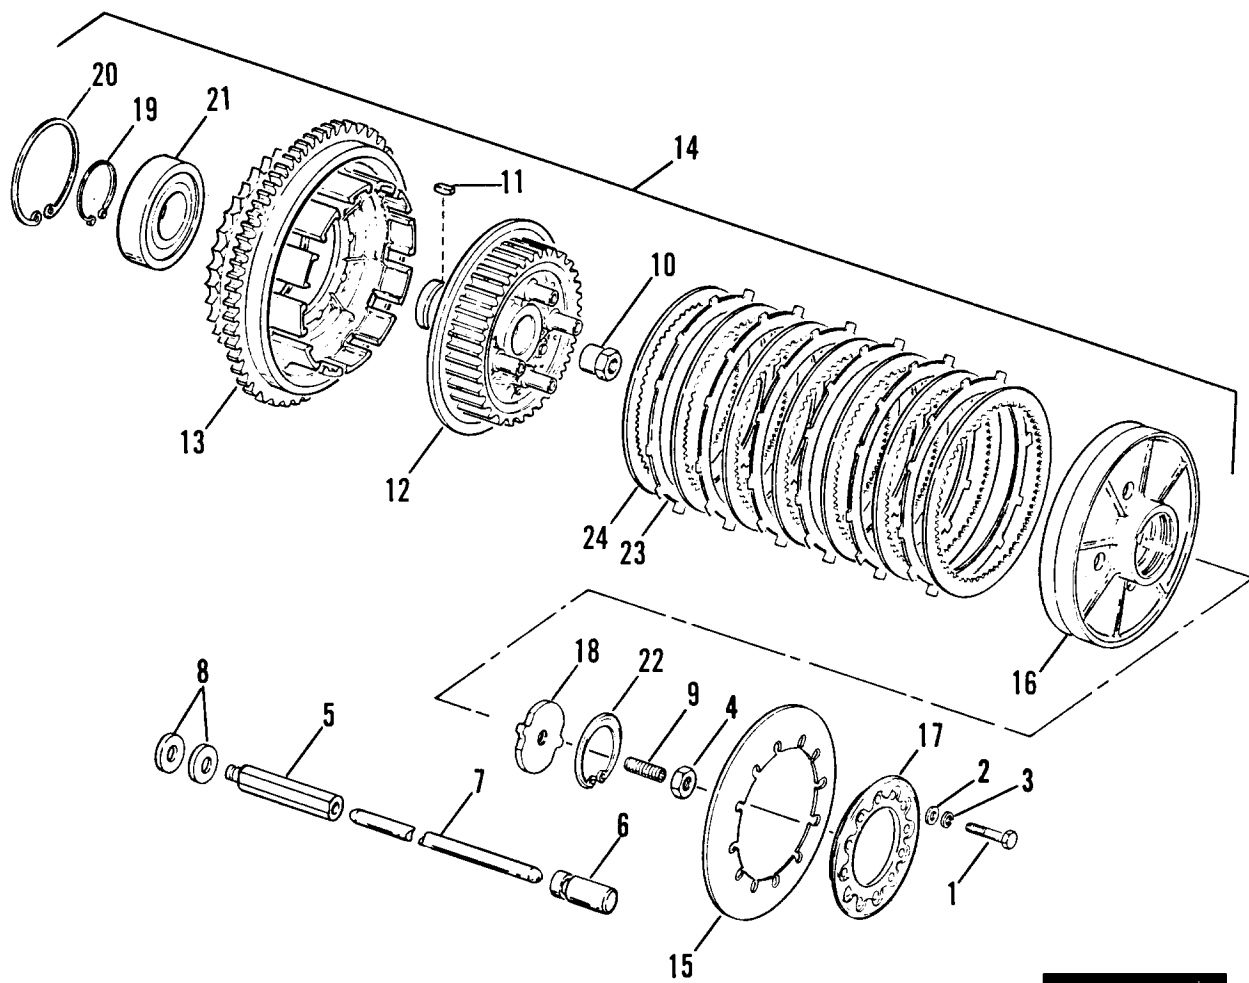

**CLUTCH**

| RETAIL<br>PRICE | INDEX<br>NO. | PART<br>NO. | N A M E | USED ON |
|-----------------|--------------|-------------|---------|---------|
|-----------------|--------------|-------------|---------|---------|

## TRANSMISSION GEARS — 5-SPEED

NOTE: THE FOLLOWING PARTS ARE NOT ILLUSTRATED.

|          |                                                 |                                |
|----------|-------------------------------------------------|--------------------------------|
| 11162    | O-RING, mainshaft — right end .....             | Late 84 to * — FLT, FXR Models |
| 35029—84 | FIFTH GEAR, mainshaft .....                     | Late 84 to * — FLT, FXR Models |
| 35042—84 | MAINSHAFT .....                                 | Late 84 to * — FLT, FXR Models |
| 37088—84 | PUSH ROD, clutch release (thru mainshaft) ..... | Late 84 to * — FLT, FXR Models |
| 37089—84 | ROD END, clutch push rod — right .....          | Late 84 to * — FLT, FXR Models |
| 37090—84 | ROD END, clutch push rod — left .....           | Late 84 to * — FLT, FXR Models |

## CLUTCH

|    |           |                                                                                                         |                                              |
|----|-----------|---------------------------------------------------------------------------------------------------------|----------------------------------------------|
| 1  | 2881W     | BOLT, 1/4-20 x 7/8 hex. hd. (4) .....                                                                   | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 2  | 6099      | WASHER, 1/4 x 7/16 x 1/16 (4) .....                                                                     | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 3  | 7036      | LOCKWASHER, 1/4 (4) .....                                                                               | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 4  | 7848W     | NUT, 5/16-18 x 1/4 x 1/2 hex. ....                                                                      | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 5  | 37089—84  | ROD END, clutch push rod .....                                                                          | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 6  | 37090—84  | ROD END, clutch push rod .....                                                                          | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 7  | 37285—84  | PUSH ROD, clutch release .....                                                                          | Late 84 to * — FL, FX Models; FXST           |
|    | 37088—84  | PUSH ROD, clutch release .....                                                                          | Late 84 to * — FLT, FXR Models               |
| 8  | 37313—80  | THRUST WASHER, inner (2) .....                                                                          | Late 84 to * — FL, FX Models; FXST           |
| 9  | 37357—84  | ADJUSTING STUD, push rod .....                                                                          | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 10 | 37496—84  | NUT, mainshaft (clutch side) .....                                                                      | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 11 | 37523—15A | KEY, clutch .....                                                                                       | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 12 | 37550—84  | CLUTCH HUB, inner .....                                                                                 | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 13 | 37702—84  | CLUTCH SHELL AND SPROCKET, with starter ring gear ..                                                    | Late 84 to * — FXE-80; FLT, FXR Models; FXST |
|    | 37707—84  | CLUTCH SHELL AND SPROCKET, with starter ring gear ..                                                    | Late 84 to * — FL Models; FXWG, FXSB         |
| 14 | 37800—84  | CLUTCH ASSEMBLY, complete — except mainshaft nut,<br>rod ends, push rod, o-ring and thrust washer ..... | Late 84 to * — FL Models; FXWG, FXSB         |
|    | 37801—84  | CLUTCH ASSEMBLY, complete — except mainshaft nut,<br>rod ends, push rod, o-ring and thrust washer ..... | Late 84 to * — FXE-80; FLT, FXR Models; FXST |
| 15 | 37871—84  | DIAPHRAGM SPRING PLATE .....                                                                            | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 16 | 37901—84  | PRESSURE PLATE .....                                                                                    | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 17 | 37902—84  | ADJUSTER PLATE .....                                                                                    | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 18 | 37903—84  | RELEASE PLATE, center .....                                                                             | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 19 | 37904—84  | RETAINING RING, internal — bearing .....                                                                | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 20 | 37905—84  | RETAINING RING, external — bearing .....                                                                | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 21 | 37906—84  | BEARING, clutch assembly .....                                                                          | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 22 | 37907—84  | RETAINING RING, pressure plate .....                                                                    | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 23 | 37930—84  | FRICTION DISC (6) .....                                                                                 | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 24 | 37975—84  | DRIVE DISC (7) .....                                                                                    | Late 84 to * — FL, FX, FLT, FXR Models; FXST |

## BELT, CHAIN AND SPROCKET

NOTE: THE FOLLOWING PARTS ARE NOT ILLUSTRATED.

|           |                                                      |                                          |
|-----------|------------------------------------------------------|------------------------------------------|
| 2614      | BOLT, chain tensioner shoe .....                     | Late 84 to * — FLT Models                |
| 6703      | WASHER, chain tensioner shoe .....                   | Late 84 to * — FLT Models                |
| 35850—84  | SPACER, sprocket shaft — .010 thick (as req'd) ..... | Late 84 to * — FL, FX, FLT, FXR Models   |
| 35851—84  | SPACER, sprocket shaft — .020 thick (as req'd) ..... | Late 84 to * — FL, FX, FLT, FXR Models   |
| 35852—84  | SPACER, sprocket shaft — .030 thick (as req'd) ..... | Late 84 to * — FL, FX, FLT, FXR Models   |
| 39990—65  | CHAIN TENSIONER SHOE .....                           | Late 84 to * — FLT, FXR Models           |
| 40384—83A | RETAINER AND COVER ASSEMBLY, w/spring washers ..     | Late 84 to * — FX, FLT, FXR Models; FXST |

| RETAIL<br>PRICE | INDEX<br>NO. | PART<br>NO. | N A M E | USED ON |
|-----------------|--------------|-------------|---------|---------|
|-----------------|--------------|-------------|---------|---------|

**ALTERNATOR AND REGULATOR**

10065 CABLE STRAP, regulator wiring . . . . . Late 84 to \* — FXR Models

**ELECTRONIC IGNITION SYSTEM**

6716 WASHER, spark coil cover mounting (2) . . . . . Late 84 to \* — FLH-80  
 31800—78 SPARK COIL COVER, includes (2) 3473 SCREW . . . . . Late 84 to \* — FLH-80  
 31987—65B SPARK PLUG CABLE, front cylinder . . . . . Late 84 to \* — FXST  
 32414—84A IGNITION MODULE . . . . . Late 84 to \* — FXRS, FXRT  
 32415—84A IGNITION MODULE . . . . . Late 84 to \* — FLT Models  
 32416—84A IGNITION MODULE . . . . . Late 84 to \* — FXST

**GEAR SHIFTER — 5-SPEED**

11117 O-RING, shifter lever sleeve (2) . . . . . Late 84 to \* — FXR Models  
 34191—79C SHIFTER FORK, 1st and 2nd . . . . . Late 84 to \* — FLT, FXR Models  
 34193—79C SHIFTER FORK, 3rd and 5th . . . . . Late 84 to \* — FLT, FXR Models  
 34195—79C SHIFTER FORK, 4th . . . . . Late 84 to \* — FLT, FXR Models  
 34561—84 SLEEVE LOCATOR PLATE . . . . . Late 84 to \* — FXR Models  
 34621—84 SHIFT LEVER . . . . . Late 84 to \* — FXR Models  
 34632—84 SLEEVE, shift lever . . . . . Late 84 to \* — FXR Models

**TRANSMISSION — MAINSHAFT & HOUSING — 4-SPEED**

34090—84 BEARING INNER RACE . . . . . Late 84 to \* — FL, FX Models; FXST  
 35039—84 MAINSHAFT, transmission . . . . . Late 84 to \* — FL, FX Models; FXST

**TRANSMISSION HOUSING — 5-SPEED**

8996 BALL BEARING, mainshaft — clutch side . . . . . Late 84 to \* — FLT, FXR Models  
 11161 RETAINING RING, ball bearing . . . . . Late 84 to \* — FLT, FXR Models  
 11165 QUAD SEAL, ball bearing . . . . . Late 84 to \* — FLT, FXR Models  
 12050 OIL SEAL, mainshaft — clutch side . . . . . Late 84 to \* — FLT, FXR Models  
 12051 OIL SEAL, transmission to starter . . . . . Late 84 to \* — FLT, FXR Models  
 34466—82 COVER, upper (chrome) . . . . . Late 84 to \* — FXRDG  
 34726—84 SPACER, sprocket . . . . . Late 84 to \* — FLT, FXR Models  
 34730—84 TRANSMISSION HOUSING . . . . . Late 84 to \* — FLT, FXR Models  
 37069—84A CLUTCH RELEASE COVER ASSEMBLY, includes cover, oil  
 seal & bushing (chrome) . . . . . Late 84 to \* — FXRDG  
 37095—83A CLUTCH RELEASE COVER ASSEMBLY, includes cover, oil  
 seal & bushing . . . . . Late 84 to \* — FLT Models, FXRS, FXRT  
 37100—84 CLUTCH RELEASE COVER ASSEMBLY, includes oil seal &  
 bushing . . . . . Late 84 to \* — FLT Models, FXRS, FXRT  
 37101—84 OIL SEAL, clutch release lever . . . . . Late 84 to \* — FLT, FXR Models  
 37102—84 BUSHING, clutch release lever stud . . . . . Late 84 to \* — FLT, FXR Models  
 37104—84 CLUTCH RELEASE COVER ASSEMBLY, includes oil seal &  
 bushing . . . . . Late 84 to \* — FXRDG

| RETAIL<br>PRICE | INDEX<br>NO. | PART<br>NO. | N A M E | USED ON |
|-----------------|--------------|-------------|---------|---------|
|-----------------|--------------|-------------|---------|---------|

**FRONT WHEEL**

|           |                                                         |                      |
|-----------|---------------------------------------------------------|----------------------|
| 43338—83  | CAST WHEEL ASSEMBLY, 19" w/bearings, seals, and spacers | Late 84 to * — FXRS  |
| 43359—84  | HUB PLATE                                               | Late 84 to * — FXRS  |
| 43024—73A | SPOKE AND NIPPLE, 19 in. rim — short (metric) (20)      | Late 84 to * — FXRDG |
| 43025—73A | SPOKE AND NIPPLE, 19 in. rim — long (metric) (20)       | Late 84 to * — FXRDG |
| 43312—84  | WHEEL ASSEMBLY                                          | Late 84 to * — FXRDG |
| 95595—84  | WHEEL WEIGHT (for cast wheel) (silver)                  | Late 84 to * — FXRS  |

**REAR BRAKE CONTROL**

|          |                                      |                           |
|----------|--------------------------------------|---------------------------|
| 4724     | BOLT, bracket, brake line tee        | Late 84 to * — FXSB       |
| 6702     | WASHER, master cylinder mounting (4) | Late 84 to * — FXR Models |
| 7038     | LOCKWASHER, bracket brake line tee   | Late 84 to * — FXSB       |
| 7740     | NUT, master cylinder mounting (2)    | Late 84 to * — FXR Models |
| 42304—84 | FRONT BRAKE TUBE                     | Late 84 to * — FL Models  |
| 63561—84 | HOSE, reservoir to master cylinder   | Late 84 to * — FXR Models |

**REAR WHEEL AND SPROCKET — FXRS**

|          |                                                 |                     |
|----------|-------------------------------------------------|---------------------|
| 95595—84 | WHEEL WEIGHT, 1/4 oz. (for cast wheel) (silver) | Late 84 to * — FXRS |
|----------|-------------------------------------------------|---------------------|

**REAR WHEEL AND SPROCKET — FXRDG**

|          |                                    |                      |
|----------|------------------------------------|----------------------|
| 41057—83 | DISC WHEEL ASSEMBLY, with bearings | Late 84 to * — FXRDG |
|----------|------------------------------------|----------------------|

**FRAME, REAR FORK AND JIFFY STAND**

|           |                                    |                                |
|-----------|------------------------------------|--------------------------------|
| 735       | PLUG, fairing mounting holes       | Late 84 to * — FXRS            |
| 7828      | LOCKNUT, rear fork pivot shaft (2) | Late 84 to * — FLT, FXR Models |
| 50031—84A | JIFFY STAND                        | Late 84 to * — FXRS            |
| 50069—84A | JIFFY STAND                        | Late 84 to * — FXRT            |

**FOOTREST**

|          |                                                |                                              |
|----------|------------------------------------------------|----------------------------------------------|
| 3825     | BOLT, passenger footrest support (2)           | Late 84 to * — FXRT                          |
| 50912—72 | SPRING WASHER, footrest / footboard (as req'd) | Late 84 to * — FL, FX, FLT, FXR Models; FXST |

**LUGGAGE CARRIER AND BOX (TOUR-PAK)**

|           |                                    |                               |
|-----------|------------------------------------|-------------------------------|
| 52186—84  | SUPPORT BLOCK                      | Late 84 to * — FL Models      |
| 53293—79  | WARNING LABEL, "Tour-Pak"          | Late 84 to * — FL Models      |
| 53407—84A | LUGGAGE CARRIER ASSEMBLY, complete | Late 84 to * — FLT Models     |
| 53408—83A | OUTER CHANNEL, right               | Late 84 to * — FL, FLT Models |
| 53409—83A | OUTER CHANNEL, left                | Late 84 to * — FL, FLT Models |
| 53410—83  | RECEPTACLE, leaf spring            | Late 84 to * — FL, FLT Models |
| 53453—84  | SPACER (4)                         | Late 84 to * — FL, FLT Models |
| 53454—84  | SCREW, outer channel mounting (4)  | Late 84 to * — FL, FLT Models |
| 53456—84  | SPACER                             | Late 84 to * — FL, FLT Models |
| 53548—84A | LUGGAGE CARRIER ASSEMBLY, complete | Late 84 to * — FL Models      |
| 90965—63  | RIVET, receptacle mounting (8)     | Late 84 to * — FL, FLT Models |

| RETAIL<br>PRICE | INDEX<br>NO. | PART<br>NO. | N A M E | USED ON |
|-----------------|--------------|-------------|---------|---------|
|-----------------|--------------|-------------|---------|---------|

**HANDLEBARS AND CONTROLS**

|           |                                         |                                              |
|-----------|-----------------------------------------|----------------------------------------------|
| 6113      | WASHER, left handlebar riser .....      | Late 84 to * — FLT Models                    |
| 6718      | WASHER, handlebar ground wire .....     | Late 84 to * — FXWG                          |
| 56402—83A | ADJUSTING SCREW, throttle control ..... | Late 84 to * — FL, FX, FLT, FXR Models; FXST |

**HEADLAMP**

|       |                              |                       |
|-------|------------------------------|-----------------------|
| 11448 | PLUG, headlamp housing ..... | Late 84 to * — FXE-80 |
|-------|------------------------------|-----------------------|

**FENDERS AND CHAIN GUARD**

|      |                                         |                       |
|------|-----------------------------------------|-----------------------|
| 2879 | BOLT, rear fender support — left .....  | Late 84 to * — FXE-80 |
| 3443 | BOLT, rear fender support — right ..... | Late 84 to * — FXE-80 |
| 6701 | WASHER, rear fender support (4) .....   | Late 84 to * — FXE-80 |

**FRONT CHAIN HOUSING**

|           |                                                        |                                              |
|-----------|--------------------------------------------------------|----------------------------------------------|
| 4812      | SCREW, clutch cover (3) .....                          | Late 84 to * — FXR, FLT Models               |
| 8980      | BALL BEARING, chain housing — inner .....              | Late 84 to * — FXR, FLT Models               |
| 9135      | ROLLER BEARING, chain housing .....                    | Late 84 to * — FL, FX Models                 |
| 12052     | OIL SEAL .....                                         | Late 84 to * — FL, FX Models; FXST           |
| 25416—84  | O-RING, chain and clutch cover .....                   | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 31433—84  | WASHER, clutch cover (nylon) (3) .....                 | Late 84 to * — FL, FX, FLT, FXR Models; FXST |
| 34901—79B | GASKET, housing cover .....                            | Late 84 to * — FLT, FXR Models               |
| 34902—79A | GASKET, chain housing .....                            | Late 84 to * — FXR Models                    |
| 34906—79A | GASKET, inspection cover .....                         | Late 84 to * — FXR Models                    |
| 60414—84  | FRONT CHAIN HOUSING .....                              | Late 84 to * — FLH-80                        |
| 60421—84  | FRONT CHAIN HOUSING .....                              | Late 84 to * — FXE-80                        |
| 60441—84  | FRONT CHAIN HOUSING .....                              | Late 84 to * — FXST                          |
| 60444—84  | FRONT CHAIN HOUSING .....                              | Late 84 to * — FLHX, FXWG                    |
| 60504—84  | FRONT CHAIN HOUSING .....                              | Late 84 to * — FXSB                          |
| 60507—82A | COVER, chain housing (w/9063 BEARING) .....            | Late 84 to * — FXE-80, FXST                  |
| 60531—83B | COVER, chain housing (w/9063 BEARING) .....            | Late 84 to * — FXWG, FXSB                    |
| 60538—81C | GASKET, housing cover .....                            | Late 84 to * — FL, FX Models; FXST           |
| 60567—65B | GASKET, inspection cover .....                         | Late 84 to * — FL, FX Models; FXST           |
| 60605—79B | COVER, chain housing (w/9063 BEARING) (polished) ..... | Late 84 to * — FXRS, FXRT; FLT Models        |
| 60642—84  | INSPECTION COVER .....                                 | Late 84 to * — FXRS, FXRT                    |
| 60661—84  | CHAIN HOUSING ASSEMBLY .....                           | Late 84 to * — FLT Models                    |
| 60662—84  | CHAIN HOUSING ASSEMBLY .....                           | Late 84 to * — FXR Models                    |
| 60665—84  | COVER, chain housing (w/9063 BEARING) (chrome) .....   | Late 84 to * — FXRDG                         |
| 60667—84  | INSPECTION COVER (chrome) .....                        | Late 84 to * — FXRDG                         |
| 60668—84  | COVER, clutch (chrome) .....                           | Late 84 to * — FXRDG                         |

**GAS TANK**

|      |                                             |                       |
|------|---------------------------------------------|-----------------------|
| 2513 | SCREW, gas tank filler strip mounting ..... | Late 84 to * — FLH-80 |
|------|---------------------------------------------|-----------------------|

| RETAIL<br>PRICE | INDEX<br>NO. | PART<br>NO. | N A M E | USED ON |
|-----------------|--------------|-------------|---------|---------|
|-----------------|--------------|-------------|---------|---------|

**OIL TANK, OIL HOSES AND REAR CHAIN OILER**

|           |  |                                                                    |              |                   |
|-----------|--|--------------------------------------------------------------------|--------------|-------------------|
| 6339      |  | WASHER, oil line bracket mounting (2)                              | Late 84 to * | FLH-80; FX Models |
| 7689W     |  | JAM NUT (2)                                                        | Late 84 to * | FLH-80; FX Models |
| 10069     |  | HOSE CLIP, filter to pump and crankcase to vent hoses              | Late 84 to * | FXR Models        |
| 10070     |  | HOSE CLIP, double — tank to pump hose                              | Late 84 to * | FXR Models        |
| 62504—82A |  | OIL TANK                                                           | Late 84 to * | FLH-80, FX Models |
| 63502—84  |  | HOSE, crankcase to oil tank vent                                   | Late 84 to * | FLT Models        |
| 63515—84  |  | HOSE, oil tank outlet to oil pump                                  | Late 84 to * | FXST              |
| 63531—84  |  | HOSE, oil pump to oil filter inlet                                 | Late 84 to * | FXST              |
| 63536—84  |  | HOSE, oil pump to oil filter inlet                                 | Late 84 to * | FLH-80; FX Models |
| 63539—84  |  | HOSE, oil pump inlet from oil tank outlet                          | Late 84 to * | FLH-80; FX Models |
| 63549—65A |  | BRACKET KIT, oil hose; includes (2) 6339 WASHER & (2) 7689 JAM NUT | Late 84 to * | FLH-80; FX Models |
| 63554—84  |  | HOSE, oil filter to oil tank inlet                                 | Late 84 to * | FXST              |
| 63557—84  |  | HOSE, oil tank outlet to oil pump                                  | Late 84 to * | FXRS, FXRT        |
| 63558—84  |  | HOSE, oil pump to oil filter inlet                                 | Late 84 to * | FXRS, FXRT        |
| 63559—84  |  | HOSE, crankcase to oil tank vent                                   | Late 84 to * | FXRS, FXRT        |
| 63563—84  |  | HOSE, oil filter outlet to oil tank vent                           | Late 84 to * | FXRS, FXRT        |
| 63564—84  |  | HOSE, crankcase to oil tank vent                                   | Late 84 to * | FLH-80; FX Models |
| 63572—84  |  | HOSE, crankcase to oil tank vent                                   | Late 84 to * | FXST              |
| 63587—84  |  | HOSE, oil filter to oil tank inlet                                 | Late 84 to * | FLH-80; FX Models |
| 63802—84A |  | BRACKET, oil filter                                                | Late 84 to * | FXST              |

**EXHAUST SYSTEM**

|           |  |                         |              |            |
|-----------|--|-------------------------|--------------|------------|
| 4014W     |  | BOLT, muffler clamp     | Late 84 to * | FXR Models |
| 65656—82A |  | MUFFLER, front (chrome) | Late 84 to * | FXRS       |
| 65657—82A |  | MUFFLER, rear (chrome)  | Late 84 to * | FXRS       |

**INSTRUMENTS AND INDICATOR LAMPS**

|           |  |                                                 |              |            |
|-----------|--|-------------------------------------------------|--------------|------------|
| 6261      |  | WASHER, speedometer cable to headlamp housing   | Late 84 to * | FXRS       |
| 56073—83  |  | RETAINER, speedometer cable to headlamp housing | Late 84 to * | FXRS       |
| 67052—78A |  | CABLE ASSEMBLY, speedometer drive               | Late 84 to * | FXSB, FXRS |

**TURN SIGNALS AND PARKING LAMPS**

|          |  |                                                            |              |        |
|----------|--|------------------------------------------------------------|--------------|--------|
| 7038     |  | LOCKWASHER, 3/8, support — rear lamp mounting              | Late 84 to * | FXWG   |
| 9898     |  | WIRE TERMINAL, female spade type — insulated - #14-16 wire | Late 84 to * | FLH-80 |
| 70128—79 |  | WIRE, hazard and turn signal flasher (orange)              | Late 84 to * | FLH-80 |

**HORN AND MIRROR**

|          |  |                        |              |            |
|----------|--|------------------------|--------------|------------|
| 69006—84 |  | BRACKET, horn mounting | Late 84 to * | FXR Models |
| 69007—84 |  | HORN                   | Late 84 to * | FXR Models |

| RETAIL<br>PRICE | INDEX<br>NO. | PART<br>NO. | N A M E | USED ON |
|-----------------|--------------|-------------|---------|---------|
|-----------------|--------------|-------------|---------|---------|

**WIRING**

|          |  |                                                                       |              |                   |
|----------|--|-----------------------------------------------------------------------|--------------|-------------------|
| 10065    |  | CABLE STRAP                                                           | Late 84 to * | — FLT Models      |
| 69545—84 |  | MAIN WIRING HARNESS                                                   | Late 84 to * | — FXRS, FXRT      |
| 70022—83 |  | WIRE ASSEMBLY, to left front directional                              | Late 84 to * | — FXE-80, FXSB    |
| 70027—83 |  | WIRE ASSEMBLY, to right front directional                             | Late 84 to * | — FXE-80, FXSB    |
| 70050—83 |  | WIRE ASSEMBLY, headlamp ground                                        | Late 84 to * | — FXSB            |
| 70064—84 |  | WIRE ASSEMBLY, starter relay positive to starter solenoid             | Late 84 to * | — FLT Models      |
| 70083—82 |  | WIRE ASSEMBLY, battery positive to starter relay                      | Late 84 to * | — FXRT            |
| 70146—84 |  | WIRE ASSEMBLY, starter solenoid positive terminal to pull-in terminal | Late 84 to * | — FLT, FXR Models |
| 70155—84 |  | WIRE ASSEMBLY, starter relay ground                                   | Late 84 to * | — FXR Models      |
| 70156—84 |  | WIRE ASSEMBLY, starter relay positive to solenoid terminal            | Late 84 to * | — FXR Models      |
| 70963—84 |  | WIRE ASSEMBLY, circuit breaker to starter solenoid                    | Late 84 to * | — FLT Models      |
| 70966—84 |  | WIRE ASSEMBLY, battery positive to starter relay                      | Late 84 to * | — FLT Models      |
| 70967—84 |  | MAIN WIRING HARNESS                                                   | Late 84 to * | — FLT Models      |

**IGNITION SWITCH**

|           |  |                                      |              |        |
|-----------|--|--------------------------------------|--------------|--------|
| 71501—73A |  | IGNITION AND LIGHT SWITCH, with lock | Late 84 to * | — FXST |
| 71506—84  |  | SWITCH COVER                         | Late 84 to * | — FXST |
| 71541—84  |  | PLATE, switch mounting               | Late 84 to * | — FXST |
| 71560—84  |  | CONTACT ROLLER                       | Late 84 to * | — FXST |
| 71580—84  |  | SWITCH LOCK AND KEYS                 | Late 84 to * | — FXST |

**INSTRUMENT PANEL**

|          |  |                                   |              |        |
|----------|--|-----------------------------------|--------------|--------|
| 70941—84 |  | SPACER, instrument panel mounting | Late 84 to * | — FXST |
|----------|--|-----------------------------------|--------------|--------|

**STARTER SWITCHES**

|           |  |                               |              |                                 |
|-----------|--|-------------------------------|--------------|---------------------------------|
| 31441—65A |  | RUBBER BOOT, solenoid plunger | Late 84 to * | — FL, FX, FLT, FXR Models; FXST |
|-----------|--|-------------------------------|--------------|---------------------------------|

**SWITCHES AND CIRCUIT BREAKER**

|           |  |                                                |              |                   |
|-----------|--|------------------------------------------------|--------------|-------------------|
| 2872W     |  | BOLT, relay mounting (2)                       | Late 84 to * | — FXR Models      |
| 3767B     |  | BOLT, relay mounting (2)                       | Late 84 to * | — FLT Models      |
| 5733      |  | SPACER, relay mounting (2)                     | Late 84 to * | — FXR Models      |
| 6703      |  | WASHER, relay mounting (4)                     | Late 84 to * | — FLT, FXR Models |
| 7041      |  | LOCKWASHER, relay terminal (2)                 | Late 84 to * | — FLT, FXR Models |
| 7069      |  | LOCKWASHER, relay terminal (2)                 | Late 84 to * | — FLT Models      |
| 7220      |  | LOCKWASHER, relay terminal                     | Late 84 to * | — FXR Models      |
| 7229W     |  | LOCKWASHER, relay mounting & ground (as req'd) | Late 84 to * | — FLT, FXR Models |
| 7638      |  | NUT, relay terminal                            | Late 84 to * | — FLT, FXR Models |
| 7742      |  | LOCKNUT, relay mounting (2)                    | Late 84 to * | — FLT, FXR Models |
| 7748W     |  | LOCKNUT, relay terminal (2)                    | Late 84 to * | — FLT, FXR Models |
| 68541—64A |  | FLASHER, hazard warning                        | Late 84 to * | — FLT Models      |
| 70970—82B |  | IGNITION PANEL                                 | Late 84 to * | — FXR Models      |
| 70961—84  |  | PLATE, circuit breaker, w/starter relay        | Late 84 to * | — FLT Models      |
| 70974—84  |  | SEAL, relay mounting                           | Late 84 to * | — FXR Models      |
| 71463—73A |  | RELAY, starter switch                          | Late 84 to * | — FLT, FXR Models |

**BATTERY**

|           |  |              |              |              |
|-----------|--|--------------|--------------|--------------|
| 66103—74A |  | PAD, battery | Late 84 to * | — FXR Models |
|-----------|--|--------------|--------------|--------------|