

Table of Contents

EVO: Transmission & Final Drive	3
1991-2003 5-Speed Constant Mesh Wet Clutch Transmission w/Trapdoor	3
<i>The Shifter Components (outside the trapdoor)</i>	4
<i>The Shifter Shaft Seal</i>	9
<i>Mainshaft Fifth Gear</i>	12
<i>Final Drive (Trans to Wheel)</i>	13
<i>Clutch</i>	13
<i>Primary Drive (engine to transmission)</i>	14
<i>Transmission Gearing</i>	14
<i>Fastener Torque Specs</i>	15
1991-1995 Torque Specs	15
1998 Torque Specs	15

[Go To Technical Menu](#)

EVO: Transmission & Final Drive

Additional References:

REF section: [1998 1200S 5-Speed Transmission Inspection](#) from XLForum Thread:

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-drivetrain/sportster-motorcycle-transmission-clutch-primary-secondary-drive/172622-1200s-5-speed-transmission-inspection?t=1848977>

1991-2003 5-Speed Constant Mesh Wet Clutch Transmission w/Trapdoor


- The rear compartment of the left and right engine case halves form the transmission housing or case just as in the four speed. An access cover, or trapdoor, is mounted on the left side of the case (inside) behind the primary cover. The main components of the transmission are mounted to this trapdoor to allow you to detach the one cover (together with all the transmission components) for easy removal and servicing without having to split the engine cases in half which otherwise would be a full engine re-build.

(Click any picture to see a full-sized version)



Overall Gearing is a ratio of the number of engine revolutions to drive the rear wheel one revolution. See the Gearing Chart in this section.

Primary / Transmission fluid capacity is considered 32 oz. (946 ml) when fully dry³⁾. However, it is typical to only need 28-30oz when doing a typical oil change. Be sure to refill the cavity so that the level is just above the bottom of

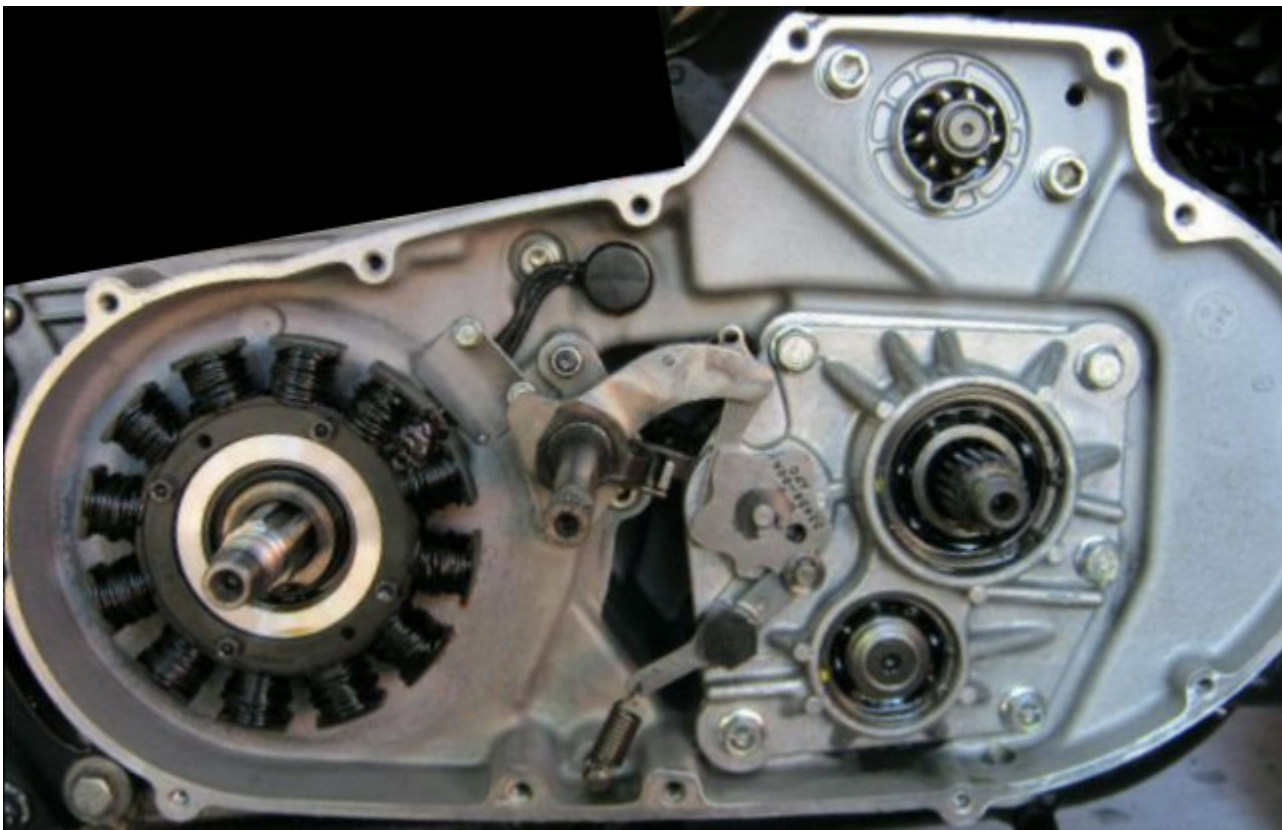

Shifter Assembly
(1998 1200S example)



The Shifter Components (outside the trapdoor)

Shifter Assembly, Shaft, Pawl & Shifter Drum



- The shifter shaft extends out through the primary cover. The foot shift lever is attached onto the shaft splines at the end. The shifter pawl is attached to the shifter assembly allowing the pawl to pull or push the rotating transmission shifter drum into gear as the shifter shaft rotates. In the detailed picture of the pawl, the shifter detent plate has been removed to show the pawl and the end of the shifter drum with its four protruding pins. That picture shows the shift drum in the neutral position.
- When the primary cover is removed, the shifter assembly has significant motion (wobble) due to being supported at only one end. That end has the shifter bearing which has a relatively loose fit in its case cavity. When the cover is in place, the shifter shaft protrudes thru the cover bushing and stabilizes the shifter assembly position. (See the GIF action image in post#1 of this XLForum thread:

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-drivetrain/sportster-motorcycle-transmission-clutch-primary-secondary-drive/200057-normal-shifter-shaft-wobble?t=2077016>)

- The shifter drum pins are an issue. Due to the engine heat cycles and the constant push and pull by the shifter pawl, the drum pins tend to come out (somewhat) from their mounting holes, causing the detent plate to skew from perpendicular. This causes stress on the detent plate retaining clip and causes excessive wear on the detent plate due to the skew. Whenever the shifter assembly is accessible, these pins should be homed into the shifter drum with a minimal tap on them with a hammer & punch.⁴⁾ The pins should have an installed height of (.326" - .334").⁵⁾ If you find the pin height outside this range, replace the pins or the shift drum as necessary. (Read more here: XLForum Thread, Starting at Post#172 - <https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-motor-engine/sportster-motorcycle-motor-top-end/201713-1250-unhappiness-2020-edition/page12?t=2078814&postcount=172#post4489773>)
- The factory manual procedure for adjusting the shifter pawl recommends using a #32 drill bit in the alignment hole of the detent plate. Many have had issues when using this procedure, so understand that the goal is to place the shifter pawl such that it is an equal distance from the pins when the shifter drum is in 3rd gear. This can be accomplished with the detent plate removed. Loosen both shifter shaft assembly mounting nuts from their studs. Then rotate the shifter shaft assembly until the pawl is in the right location. Then partially tighten the lower nut, then tighten the upper nut, then finish tightening the lower nut. Make sure the final location is accurately set. This centering is critical to create accurate gear shifts. See these threads for more discussion - <https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-drivetrain/sportster-motorcycle-transmission-clutch-primary-secondary-drive/17413-detent-plate?t=29016+and+http://xlforum.net/forums/showthread.php?t=1556767>.

Shifter Detent Plate, Lever & Spring

- The detent plate establishes the proper position of the shifter drum to keep the transmission in a particular gear, as well as to define the neutral position. The detent lever (arm) roller lodges between the lobes of the detent plate to resist slipping out of gear or neutral.
- The original detent plate was upgraded in 1999 (to P/N 33656-90A) to provide a more certain engagement of the gears and to make the neutral location easier to find. It is backward compatible.⁶⁾
- Due to the above mentioned shifter drum pin issue, the OEM spring clip (P/N 11019) is sometimes replaced with an E-clip and a thin washer in order to help the detent plate keep those pins in place.⁷⁾


Part Description	1991-1993 P/N	1994-2003 P/N
Shifter Shaft	34015-91	
Primary Cover	25430-89A+	25430-94A+
Shaft Bushing	40520-63	
Shaft Oil Seal	11000101++	
Shaft Washer	7019	

+ __latest P/N

++_latest P/N is 11000101 with 'garter spring' inside (old P/N 37101-84/A/B - no spring). Dims per James Gasket - 13 x 19 x 4

... Cometic Equiv of 11000101 is C10213

The factory detent plate retainer ring is installed by hand and from the side of the groove in the shift drum (90 degrees to the groove)

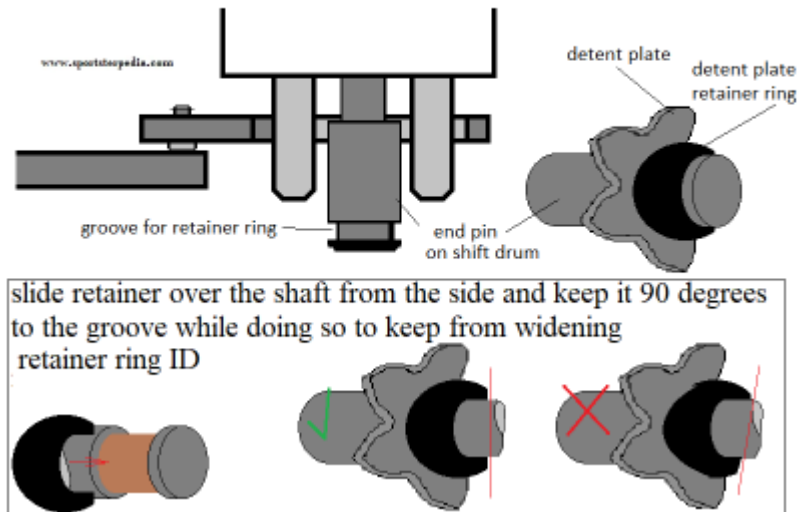

- Another idea to install the detent plate, is to thread the end of the shaft, then use a nut with blue Loctite. ⁹⁾






(Click any picture to see a full-sized version)

The Shifter Shaft Seal

Install On all models:

The oil seal can be removed without removing the primary cover - remove the lever, then use a pick or screwdriver to pry the seal out of the cavity.

Shifter Shaft Bore In Primary Cover Outer Oil Seal & Inner Bushing (1994-2005)

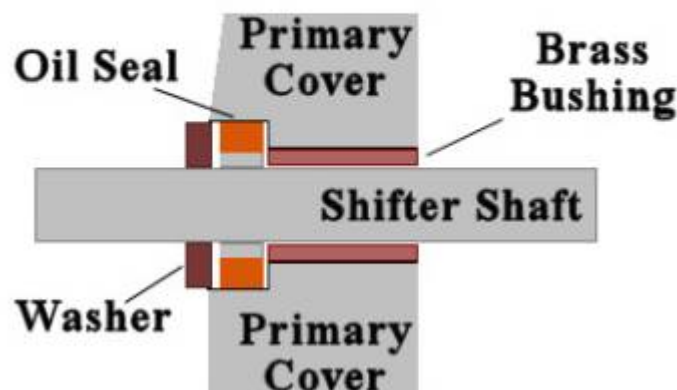

On installs, make sure the shaft is free from debris or rust and be sure to put tape over the splines on the shifter shaft before installing the oil seal to prevent the splines from cutting the seal.

The Oil Seal is installed first, followed by the washer/spacer.

For 1986-2005, the new shifter shaft oil seal is P/N 11000101. It replaces P/N 37101-84B.

NOTE: There is a [TSB \(M-1350\)](#) related to the 'NEW' Shifter Shaft Seal P/N 11000101 being installed with Special Tool HD-51337. The new seal has a 'garter spring' to help seal the shifter shaft from leaks. In this TSB, the following caution is made: If the tool is not used, install seal to a depth of 0.125-0.135 inches. DO NOT bottom the seal in the bore. This allows the spring to keep the lips of the seal against the shaft. Bottoming the seal will damage it and prevent it from sealing properly.

(While this TSB refers to Big Twins with 6-spd transmissions, this shifter shaft seal is used on other models, including the Sportsters.)

The idea is that if you bottom the seal, the lips around the shaft will be pressed tightly against the primary cover and will not allow the lips to smoothly follow the movement of the shaft. Thus, the tight lips will be thwarting the 'sealing' aspect that the 'garter spring' is designed to enhance.

The clearance should be from the deepest edge of the seal cavity in the primary cover. The referenced instructions are for the BT models. Therefore, the Sportster models may not be exactly the same.

BUT, the principle still applies: Insert the seal slightly below that deepest edge of the cavity and don't bottom out the seal. That gives it the best chance to work correctly.

To increase the tightness of the oil seal (as often suggested by SportsterPaul), after installing the rubber washer, you might install one or two o-rings to take up the gap between the shift lever and the washer. The o-rings do not seal against leaking oil but, instead, they put additional pressure on the oil seal in the primary cover cavity, which may help if you have a leaking seal. (But be sure you are installing the seal correctly as mentioned above, not bottoming in the bore.)



A couple ways of removing the seal:



10)



11)



12)

Or:



Mainshaft Fifth Gear

1991-E1994 Mainshaft 5th Gear, Bearing & Spacer

- 35034-89A - Gear Includes Needle Bearings
 - 8996A - Ball Bearing (older P/N 8996 obsoleted)
 - 33344-85 - Drive Sprocket Spacer

L1994-2005 Mainshaft 5th Gear, Bearing & Spacer

- 35034-94 - Gear Includes Needle Bearings
 - 8996A - Ball Bearing
 - 33344-94 - Drive Sprocket Spacer



Replacing the Case Bearing for the Mainshaft Fifth Gear

See this thread: <http://www.xlforum.net/showthread.php?t=766754>

Final Drive (Trans to Wheel)

Final Drive Sprocket Torque					
Nut Description		Nut Size	Tightening Torque		Notes
1991-92 Chain		1-7/8" Nut - Left-hand Threads	110-120 ft-lbs		Max 150ft-lbs
1991-94 Belt		1-7/8" Nut - Left-hand Threads	110-120 ft-lbs		Max 150ft-lbs
1995-03 Belt			Tighten to 50ft-lbs, then add 30°-40° more rotation		
(use only 2 or 3 drops of RED threadlocker on this nut)					
Be sure to use a sprocket locking tool when removing or installing the Sprocket Nut					
Year	883 Model(s)	Transmission Sprocket	Rear Wheel Sprocket	Secondary Drive Belt	Ratio
1991-1992	883 & 883 Hug (chain) ¹⁵⁾	21 Teeth Chain Gear	48 Teeth Chain Gear	Chain driven	2.29:1
1991	883 Deluxe ¹⁶⁾	27 Teeth	61 Teeth (Belt)	127 Teeth (yellow)	2.26:1
1992	883 Deluxe ¹⁷⁾	27 Teeth	61 Teeth (Belt)	128 Teeth (orange)	2.26:1
1993-2003	883 all models	27 Teeth	61 Teeth (Belt)	128 Teeth (orange)	2.26:1
Year	1200 Model(s)	Transmission Sprocket	Rear Wheel Sprocket	Secondary Drive Belt	Ratio
1991-2003	1200 all models	29 Teeth	61 Teeth (Belt)	128 Teeth (orange)	2.10:1

See damage from loose Belt Drive Sprocket

XLForum Thread:

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-era-specific-and-model-specific/frame-mount-evo-sportster-talk-1986-2003-models/93208-bike-crapped-out-may-need-help-from-you-guys?t=767676>

XLForum Thread:

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-drivetrain/sportster-motorcycle-transmission-clutch-primary-secondary-drive/106994-5th-gear-bearing-walking-out-found-during-belt-replcmnt?t=966388>

Clutch

1991-2003 Wet Clutch Information ^{18) 19) 20) 21)}		
Clutch Plate Thickness	Friction Plate (OEM New)	0.0866 in. (± 0.0031 in.) / (2.200 mm ± 0.079 mm)
	Steel Plate	0.0629 in. (± 0.0020 in.) / (1.598 mm ± 0.51 mm)
Max Allowable Warpage	Friction or Steel Plate	0.0059 in. / (0.150 mm)
Service Wear Limit for set of 8 Friction Plates		0.6610 in. min. / (16.787 mm)

(For More Clutch Info. see [Clutch Section of Sportsterpedia](#))

Primary Drive (engine to transmission)

Year	Domestic Model	Engine Sprocket	Clutch Sprocket	Ratio
1991-1995 ²²⁾²³⁾²⁴⁾	All Models	35 Teeth	56 Teeth	1.60:1
1998 ²⁵⁾	All Models	35 Teeth	56 Teeth	1.60:1

(For More Primary Drive Info, see [Primary Section of Sportsterpedia](#))

Transmission Gearing

- **Internal Gear Ratios = number of clutch gear revolutions to drive the mainshaft sprocket one revolution.**

Year	Internal Gear Ratios				
US Models	1st	2nd	3rd	4th	5th
1991-1992 All Models ²⁶⁾	2.78	2.03	1.49	1.22	1.00

- **Overall Gear Ratios = number of engine revolutions to drive rear wheel one revolution.**

Year	Overall Gear Ratios					Year	Overall Gear Ratios					
US 883 Models	27) 28) 29) 30)						US 1200 Models	31) 32)33)				
	1st	2nd	3rd	4th	5th			1st	2nd	3rd	4th	5th
1991-1992 883, 883 Hug	10.16	7.41	5.44	4.45	3.66		1991-1995	9.35	6.82	5.01	4.09	3.36
1991-1992 883 Deluxe	10.04	7.32	5.38	4.39	3.61							
1993-1995 883 (All) ³⁴⁾												
1998-1999 883 ³⁵⁾	9.717	7.120	5.180	4.267	3.615		1998-1999 1200	9.047	6.629	4.823	3.973	3.366
2000-2002 883 ³⁶⁾	9.71	6.69	5.18	4.27	3.62		2000-2002 1200	9.05	6.22	4.82	3.97	3.36
2003 883 ³⁷⁾	9.717	6.690	5.180	4.267	3.615		2003 1200	9.047	6.210 ³⁸⁾	4.823	3.973	3.366

There are some discrepancies between the values in the Owner's Manuals and those in the Factory Service Manual

Year	Overall Gear Ratios					Year	Overall Gear Ratios				
HDI 883 Models ^{39) 40)}	1st	2nd	3rd	4th	5th	HDI 1200 Models ⁴¹⁾⁴²⁾	1st	2nd	3rd	4th	5th
1993-1994 883	9.71	7.12	5.18	4.26	3.61	1993-1994	9.04	6.62	4.82	3.97	3.36
1998 883	9.71	7.12	5.18	4.26	3.61	1998 1200	9.04	6.62	4.82	3.97	3.36

Year	Overall Gear Ratios					Year	Overall Gear Ratios				
Year	Overall Gear Ratios					Year	Overall Gear Ratios				
HDI 883 Swiss Models ⁴³⁾						HDI 1200 Swiss Models ⁴⁴⁾					
	1st	2nd	3rd	4th	5th		1st	2nd	3rd	4th	5th
1993-1994	9.05	6.60	4.85	3.96	3.25	1993-1994	8.43	6.14	4.51	3.68	3.03

Fastener Torque Specs

1991-1995 Torque Specs

Footnotes show data sources ⁴⁵⁾⁴⁶⁾⁴⁷⁾

Transmission sprocket nut locking screws	
- 1991 models (1 screw)	50 - 60 in. lbs
- 1992 chain drive models (1 screw)	50 - 60 in. lbs
- 1992 belt drive models (2 screws)	7 - 9 ft lbs
- 1993-1995 models	90 - 110 in. lbs (10.2 - 12.4 Nm)
Transmission sprocket nut (Caution left handed threads)	110 - 120 ft lbs (149 - 163 Nm)
Access door / trapdoor bolts	13 - 17 ft lbs (18 - 23 Nm)
Engine sprocket nut (right hand threads)	150 - 165 ft lbs (203 - 224 Nm)
Clutch hub nut (Caution left handed threads)	70 - 80 ft lbs (95 - 108 Nm)
Sprocket cover screws	90 - 110 in. lbs (10.2 - 12.4 Nm)
Drain plug	14 - 21 ft lbs (19 - 28 Nm)
Primary cover screws	80 - 110 in. lbs (9.0 - 12.4 Nm)
Primary/ transmission lubricant level screw	90 - 110 in. lbs (10.2 - 12.4 Nm)
Chain tensioner stud nut	20 - 25 ft lbs (27 - 34 Nm)
Stator Torx fasteners	30 - 40 in. lbs (3.4 - 4.5 Nm)
Neutral indicator switch (91-92)	3 - 5 ft lbs
Shift lever pinch bolt	90 - 110 in lbs (10.2 - 12.4 Nm)
Footrest fasteners	16 - 28 ft lbs (22 - 38 Nm)
Clutch release mechanism screws	22 - 30 in lbs (2.5 - 3.4 Nm)
Inspection (Derby) cover screws	40 - 60 in lbs (4.5 - 6.8 Nm)
Countershaft retaining screw	13 - 17 in lbs (18 - 23 Nm)

1998 Torque Specs

Footnotes show data sources ⁴⁸⁾

Sprocket nut lock-plate screws	90-110 in-lbs / 10.2-12.4 Nm
--------------------------------	------------------------------

Sprocket nut (caution - left handed threads)	
50 ft-lbs. (67.8 Nm) initially	
Tighten an additional 30-40 degrees	
Install lock plate over sprocket nut to align to two opposite threaded mounting holes	
Tighten sprocket nut additionally if holes don't match up but not to exceed 45 degrees total	
Sprocket cover screws	90-110 in-lbs. (10.2-12.4 Nm)
Access / trapdoor bolts	13-17 ft-lbs. (18-23 Nm)
Engine sprocket nut	190-210 ft-lbs. (258-285 Nm)
Clutch hub nut (caution- left hand threads)	70-80 ft-lbs (95-108 Nm)
Countershaft retaining screw	13-17 ft-lbs (18-23 Nm)
Oil Drain plug	14-21 ft-lbs. (19-28 Nm)
Primary cover Allen Head screws (1/4"x 20 threads)	80-110 in-lbs. (9.0-12.4 Nm)
Primary chain tensioner stud	20-25 ft-lbs. (27-34 Nm)
Stator Torx Head screws(1/4"x 20 threads)	30-40 in-lbs. (3.4-4.5 Nm)
Shift lever pinch bolt	90-110 in-lbs. (10.2-12.4 Nm)
Clutch inspection (Derby)cover T-27 Torx Head screws	40-60 in-lbs. (4.5-6.8 Nm)
Footrest Allen Head bolts (5/16"x18)	16-28 ft-lbs. (22-38 Nm)

Go To Technical Menu

1) , 2)

HD 5 speed transmission / photo by hippysmack of the XLFORUM

3)

HD XLH FSM

4) , 7)

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-drivetrain/sportster-motorcycle-transmission-clutch-primary-secondary-drive/156482-shift-problem-maybe-shift-detent-plate?t=1675146>

5)

HD Tech Tip #47 dated March 1998

6)

See TT#50 - also Reddtigger's comments in this thread -

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-drivetrain/sportster-motorcycle-transmission-clutch-primary-secondary-drive/51670-has-anyone-replaced-their-sporty-transmission?t=222357>

8)

drawing by Hippysmack

9)

photos by MatHormell of the XLFORUM

<https://www.xlforum.net/forum/sportster-motorcycle-forum/sportster-motorcycle-drivetrain/sportster-motorcycle-transmission-clutch-primary-secondary-drive/49212-shifter-detent-plate-installation/page3?t=198227&page=3>

10) , 11) , 12) , 13) , 14)

photo by Hippysmack

15) , 16)

1991 HD Sportster FSM pg 6-1

17) , 22) , 26) , 27) , 31)

1991-1992 HD Sportster FSM pg 6-1

18)

1991-1992 HD FSM pg 6-2

19)

1993-1994 HD FSM pg 6-2

20)

1998 HD FSM pg 6-2

21)

2003 HD FSM pg 6-2

23) , 28) , 32) , 34) , 39) , 41) , 43) , 44)

1993-1994 HD Sportster FSM pg 6-1

24) , 29)

1995 data from 1995 HD XLH FSM per RandallM of the XLForum.net

25)

1998 HD XLH FSM pg 6-1

30) , 33) , 40) , 42)

1998 Sportster FSM pg 6-1

35)

1998/99 HD Sportster Owner's Manual

36)

2000-02 HD Sportster Owner's Manual

37)

2003 HD Sportster Owner's Manual

38)

the 2003 Owner's Manual has 6.210 - the FSM has 6.62

45)

1991-1992 HD Sportster FSM pg 6-2

46)

1993-1994 HD Sportster FSM pg 6-2

47)

1995 data from the 1995 HD XLH FSM per RandallM of the XLForum.net

48)

1998 HD XLH FSM pg 6-2

From:

<https://sportsterpedia.com/> - **Sportsterpedia**

Permanent link:

<https://sportsterpedia.com/doku.php/techtalk:evo:transfinal03>

Last update: **2025/01/20 07:20**

